


Vehicle Cleaning Guidelines

LOOK AFTER YOUR LIVERY

Follow these instructions to properly clean your prismatic and engineering grade livery

DO

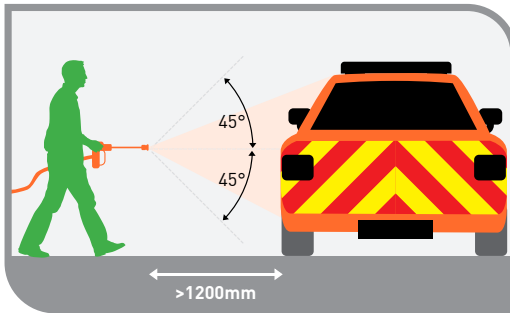

- Do** use a fan spray of water
- Do** maximum 75 bar water pressure, maximum temp 38° C
- Do** maintain nozzle more than 1200mm from livery edges
- Do** use a mild detergent & clean water
- Do** use a soft brush/cloth
- Do** avoid Chevron tips, corners and vulnerable areas of kit

DO NOT



- Do Not** direct high pressure water at edges of sheeting
- Do Not** hold nozzle closer than 1200mm to livery
- Do Not** direct water at an angle of less than 45° to livery
- Do Not** use solvents, abrasive, alcohol based cleaners or vehicle under body cleaning solutions
- Do Not** steam clean liveries